

Magnum Pro

CALIBRATION PUMPS

"We Can Handle The Pressure!"™

East Hills Instruments
60 Shames Drive
Westbury, NY 11590




Protected by US & International Patents

MVP-600

Pneumatic Calibration Hand Pump

The MVP-600 Pneumatic Calibration Hand Pump comfortably sources pressure and vacuum to check calibration of gauges, switches, transmitters, and recorders. The contoured cushion handles provide extra comfort while preventing the pump from sliding. The oversized check valve provides smooth operation throughout the output range. The dual o-rings on all pistons insure zero leakage.

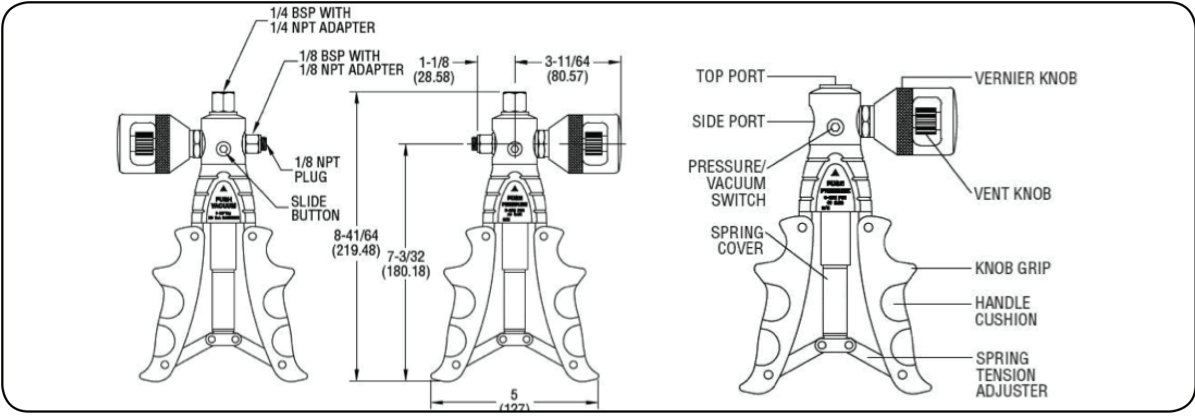

SPECIFICATIONS

Media: Air and compatible gases only

0.1% of Reading

+/-0.1% of reading +/-0.01 FS +/- 1 digit.

For 0 to 64.5 PSIA (0 to 50 PSIG) FS is 64.5 PSIA (0 to 50 PSIG) .

For 64.5 to 3014.5 PSIA (50 to 3000 PSIG) FS is 3014.5 PSIA (50 to 3000 PSIG)

Range: Vacuum to Pressure (28"Hg - 600 PSI / 40 BAR)

Connections: 1/4" NPT/BSP (top) & 1/8" NPT/BSP (side)

Materials: Stainless steel fittings, anodized aluminum housing, plastic/rubber handles, nitrile o-rings.

Weight: 2 lbs (0.91 kg)

Warranty: 2-year "quibble free" warranty. Compatible with all gauges and calibrators. Made in the USA.

POINTS TO REMEMBER

- Insure all gauges and instruments to be calibrated are disconnected from process pressures before connect-ing the pump. Do not exceed 600 psi (41 bar) as this is the MVP-600's maximum pressure.
- The MVP-600 has 1/8" and 1/4" BSP ports. In order to use NPT fittings, the required NPT to BSP parallel thread-adapters need to be installed (Adapters are included)
- Do not use thread sealant paste or tape on the male end of the adapters (Female end of the adapters require the use of paste or Teflon tape).
- Bonded washers (included) are required to insure a proper seal. To seal the adapters, simply hand-tighten and snug up with a wrench. Do not over-tighten.
- The MVP-600 utilizes a Schrader valve instead of a nee-dled valve. Thus full open or closed is several turns from the end of the travel. Over-tightening does not increase the seal.

OPERATION

1. Push the pressure/vacuum valve to the desired func-tion (ex: if pressure generation is desired, the pin should be PUSHED IN on the side of the pump housing bearing the label "PRESSURE".
2. Close the vent knob by rotating it away from the pump housing. Please note that there should be a space be-tween the end of the vent knob and the base of the ver-nier knob.
3. For high pressure operation, back out the vernier knob until the ring on the vernier shaft is visible. Pump to pressurize. Turn the vernier knob towards the pump housing and the pressure should easily be able to reach 600 psi. Note that for a maximum pressure of 600 psi to be reached, the handles should be 3/4" apart at the closest point. The closer the handles are to each other, the lower the amount of pressure that will be able to be generated.
4. To release pressure slowly, turn the vent knob in to-wards the pump body. To increase or decrease pressure slightly for minor adjustments, use the vernier knob.

MAINTENANCE

No routine maintenance is required. A periodic check of sys-tem calibration is recommended, however. While the MVP-600 is field serviceable, it is recommended it be returned to East Hills Instruments if repair is needed. Please be sure to fill out an RMA form online prior to shipping.

WARRANTY/DISCLAIMER: East Hills Instruments, Inc. warrants this unit to be free of defects in materials and workmanship for a period of twenty-five months from date of purchase. East Hills Instruments' warranty adds an additional one month to the normal twenty-four month product warranty to cov-er handling and shipping time. This insures that all customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. East Hills Instruments' will issue a return merchandise authorization (RMA) number immediately upon filling out the RMA form on our website. If the product is found to be defective upon examination by the Repair Department, the product will be repaired or replaced at no charge. This warranty also includes damage that may have occurred in the regular activities that the pump is designed for (Including accidental dropping of the product, as it is designed to withstand considerable damage). Unauthorized repair attempts or modification of the product may result in voiding of the warranty, and should be avoided. **RETURN REQUESTS / INQUIRIES:** Direct all warranty and repair requests/inquiries to the East Hills Instruments Customer Service Department. Before returning any product(s), purchaser must obtain an RMA number via our website in order to avoid processing delays. The assigned RMA number should then be marked on the outside of the return package and on any correspondence. The purchaser is responsible for any shipping charges, freight, insurance and proper packaging to prevent breakage in transit.